



STILEWOOD

Exterior Handing Codes and Rough Opening Calculations


Left - Hand Inswing (as viewed from exterior of building)

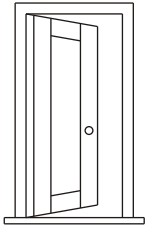


D-LHI

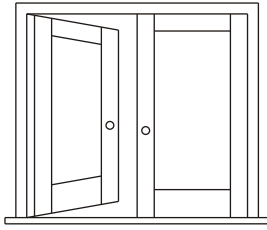


DD-LHI

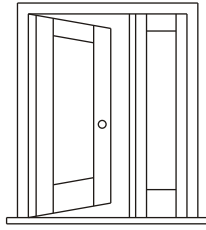

DS-LHI

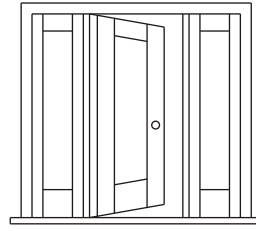


SDS-LHI

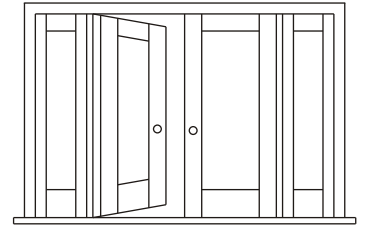


SDDS-LHI


Right - Hand Inswing (as viewed from exterior of building)

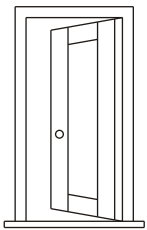


D-RHI

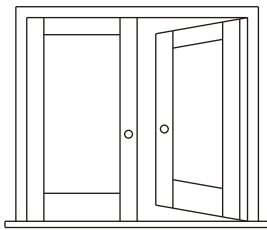


DD-RHI

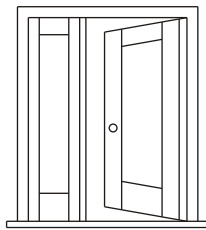

DS-RHI

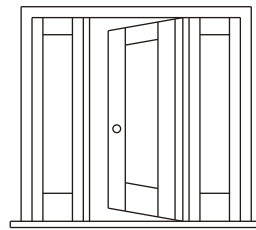


SDS-RHI

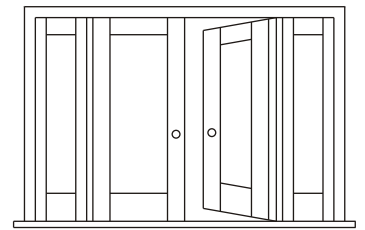


SDDS-RHI


Right - Hand Outswing (as viewed from exterior of building)

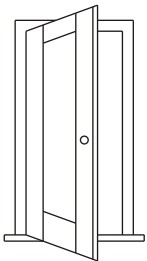


D-RHO

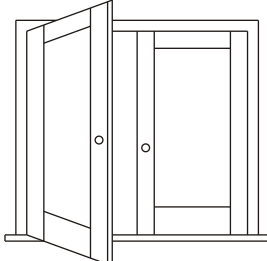


DD-RHO

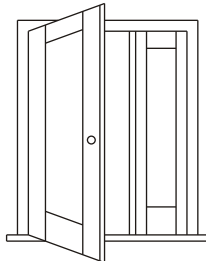

DS-RHO

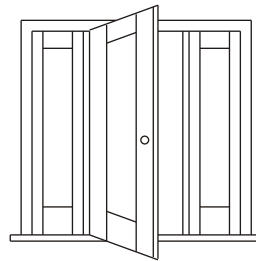


SDS-RHO

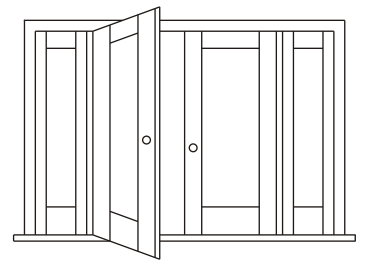


SDDS-RHO


Left - Hand Outswing (as viewed from exterior of building)

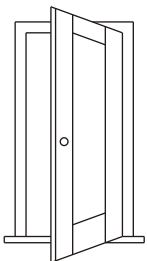


D-LHO

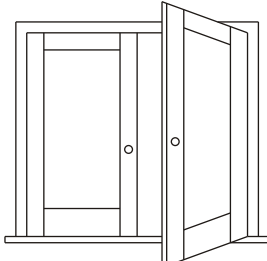


DD-LHO

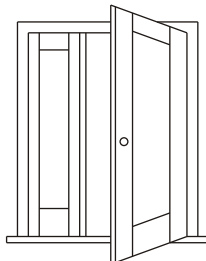

DS-LHO

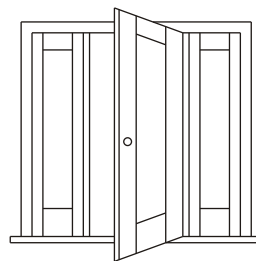

SDS-LHO

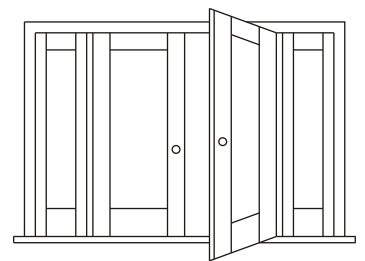

SDDS-LHO

Door System Rough Openings

D-Unit
 DD-Unit
 SD-Unit (sidelites are calculated at 14")
 SDS-Unit (sidelites are calculated at 14")
 SDDS-Unit (sidelites are calculated at 14")

2'8 x 6'8 Doors

34" x 83 1/2"
 67" x 83 1/2"
 50" x 83 1/2"
 65 1/4" x 83 1/2"
 98 1/4" x 83 1/2"

3'0 x 6'8 Doors

38" x 83 1/2"
 75" x 83 1/2"
 54" x 83 1/2"
 69 1/4" x 83 1/2"
 106 1/4" x 83 1/2"

Openings which include sidelites are calculated using 14" sidelites

Rough opening height for 84" doors is 87 1/2"

Rough opening height for 96" doors is 99 1/2"